




# INSTALLATION INSTRUCTIONS

## 400W1-433 Transmitter 433 Frequency

### Programming -

NOTE: The 400W1-433 Transmitter is only compatible with the 400RC433 Receiver.

- 1) Attach battery to the 400W1-433 transmitter.
- 2) Push P1 on the Receiver 1 channel 433 until you hear a beep, then touch the black flagged wires together and hold until the receiver beeps again. The 400W1-433 will then be programmed into the receiver.

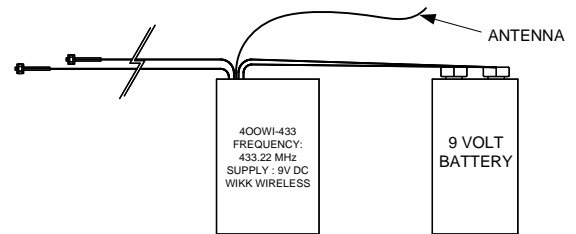

### Troubleshooting -

#### Problem

- A) The receiver does not receive the transmitter signal and the transmitter LED will not light up.
- B) Operation is very weak or sporadic

#### Solution

- Change the battery
- Change the battery or check the wiring on the transmitter or receiver to make sure wires are secure and not pinched.

- 3) Attach quick connects to switch. Twist wires from the switch and transmitter together and insert into the gel connector and crimp.

### Technical Specifications

Operating Frequency	-	433 MHz
Battery	-	9 Volt DC
Operating Temperature	-	-20° C -100° F

Type – 433TSPWIK  
 FCC IS: SU433TSP4K

*This device complies with Part 15 of the FCC Rules.*

*Operation is subject to the following two conditions:*

- 1) *This device may not cause harmful interference, and*
- 2) *This device must accept interference received, including interference that may cause undesired operation.*

