



SECURITY DOOR CONTROLS ■ WWW.SDCSECURITY.COM  
 801 Avenida Acaso, Camarillo, CA 93012  
 [t] 800.413.8783 ■ 805.494.0622 ■ E-mail: service@sdsecurity.com

**TEMPLATE-S6101**

**Devices covered by this template:**  
**Panic / Fire Rim Exit Device Exit Only.**

THIS SIDE UP FOR LHR DOOR

FOLD HERE  
**CAUTION**  
 DO NOT USE DOOR EDGE

**(4x) DEVICE MOUNTING HOLES**

METAL: DRILL / TAP FOR 1/4"-20 MACHINE SCREWS

WOOD: PRE-DRILL 1/8" HOLES.

SEXBOLTS: DRILL 5/16" CLEARANCE HOLES ON PUSH SIDE, 3/8" HOLES ON PULL SIDE.

**(2x) STRIKE MOUNTING HOLES**

METAL: DRILL / TAP FOR 1/4" - 20 MACHINE SCREWS


WOOD: PRE-DRILL 1/8" HOLES

**(2x) END CAP BRACKET HOLES**

METAL: DRILL / TAP FOR 1/4"-20 MACHINE SCREWS.

WOOD: PRE-DRILL 1/8" HOLES.

SEXBOLTS: DRILL 5/16" CLEARANCE HOLES ON PUSH SIDE, 3/8" ON PULL SIDE.

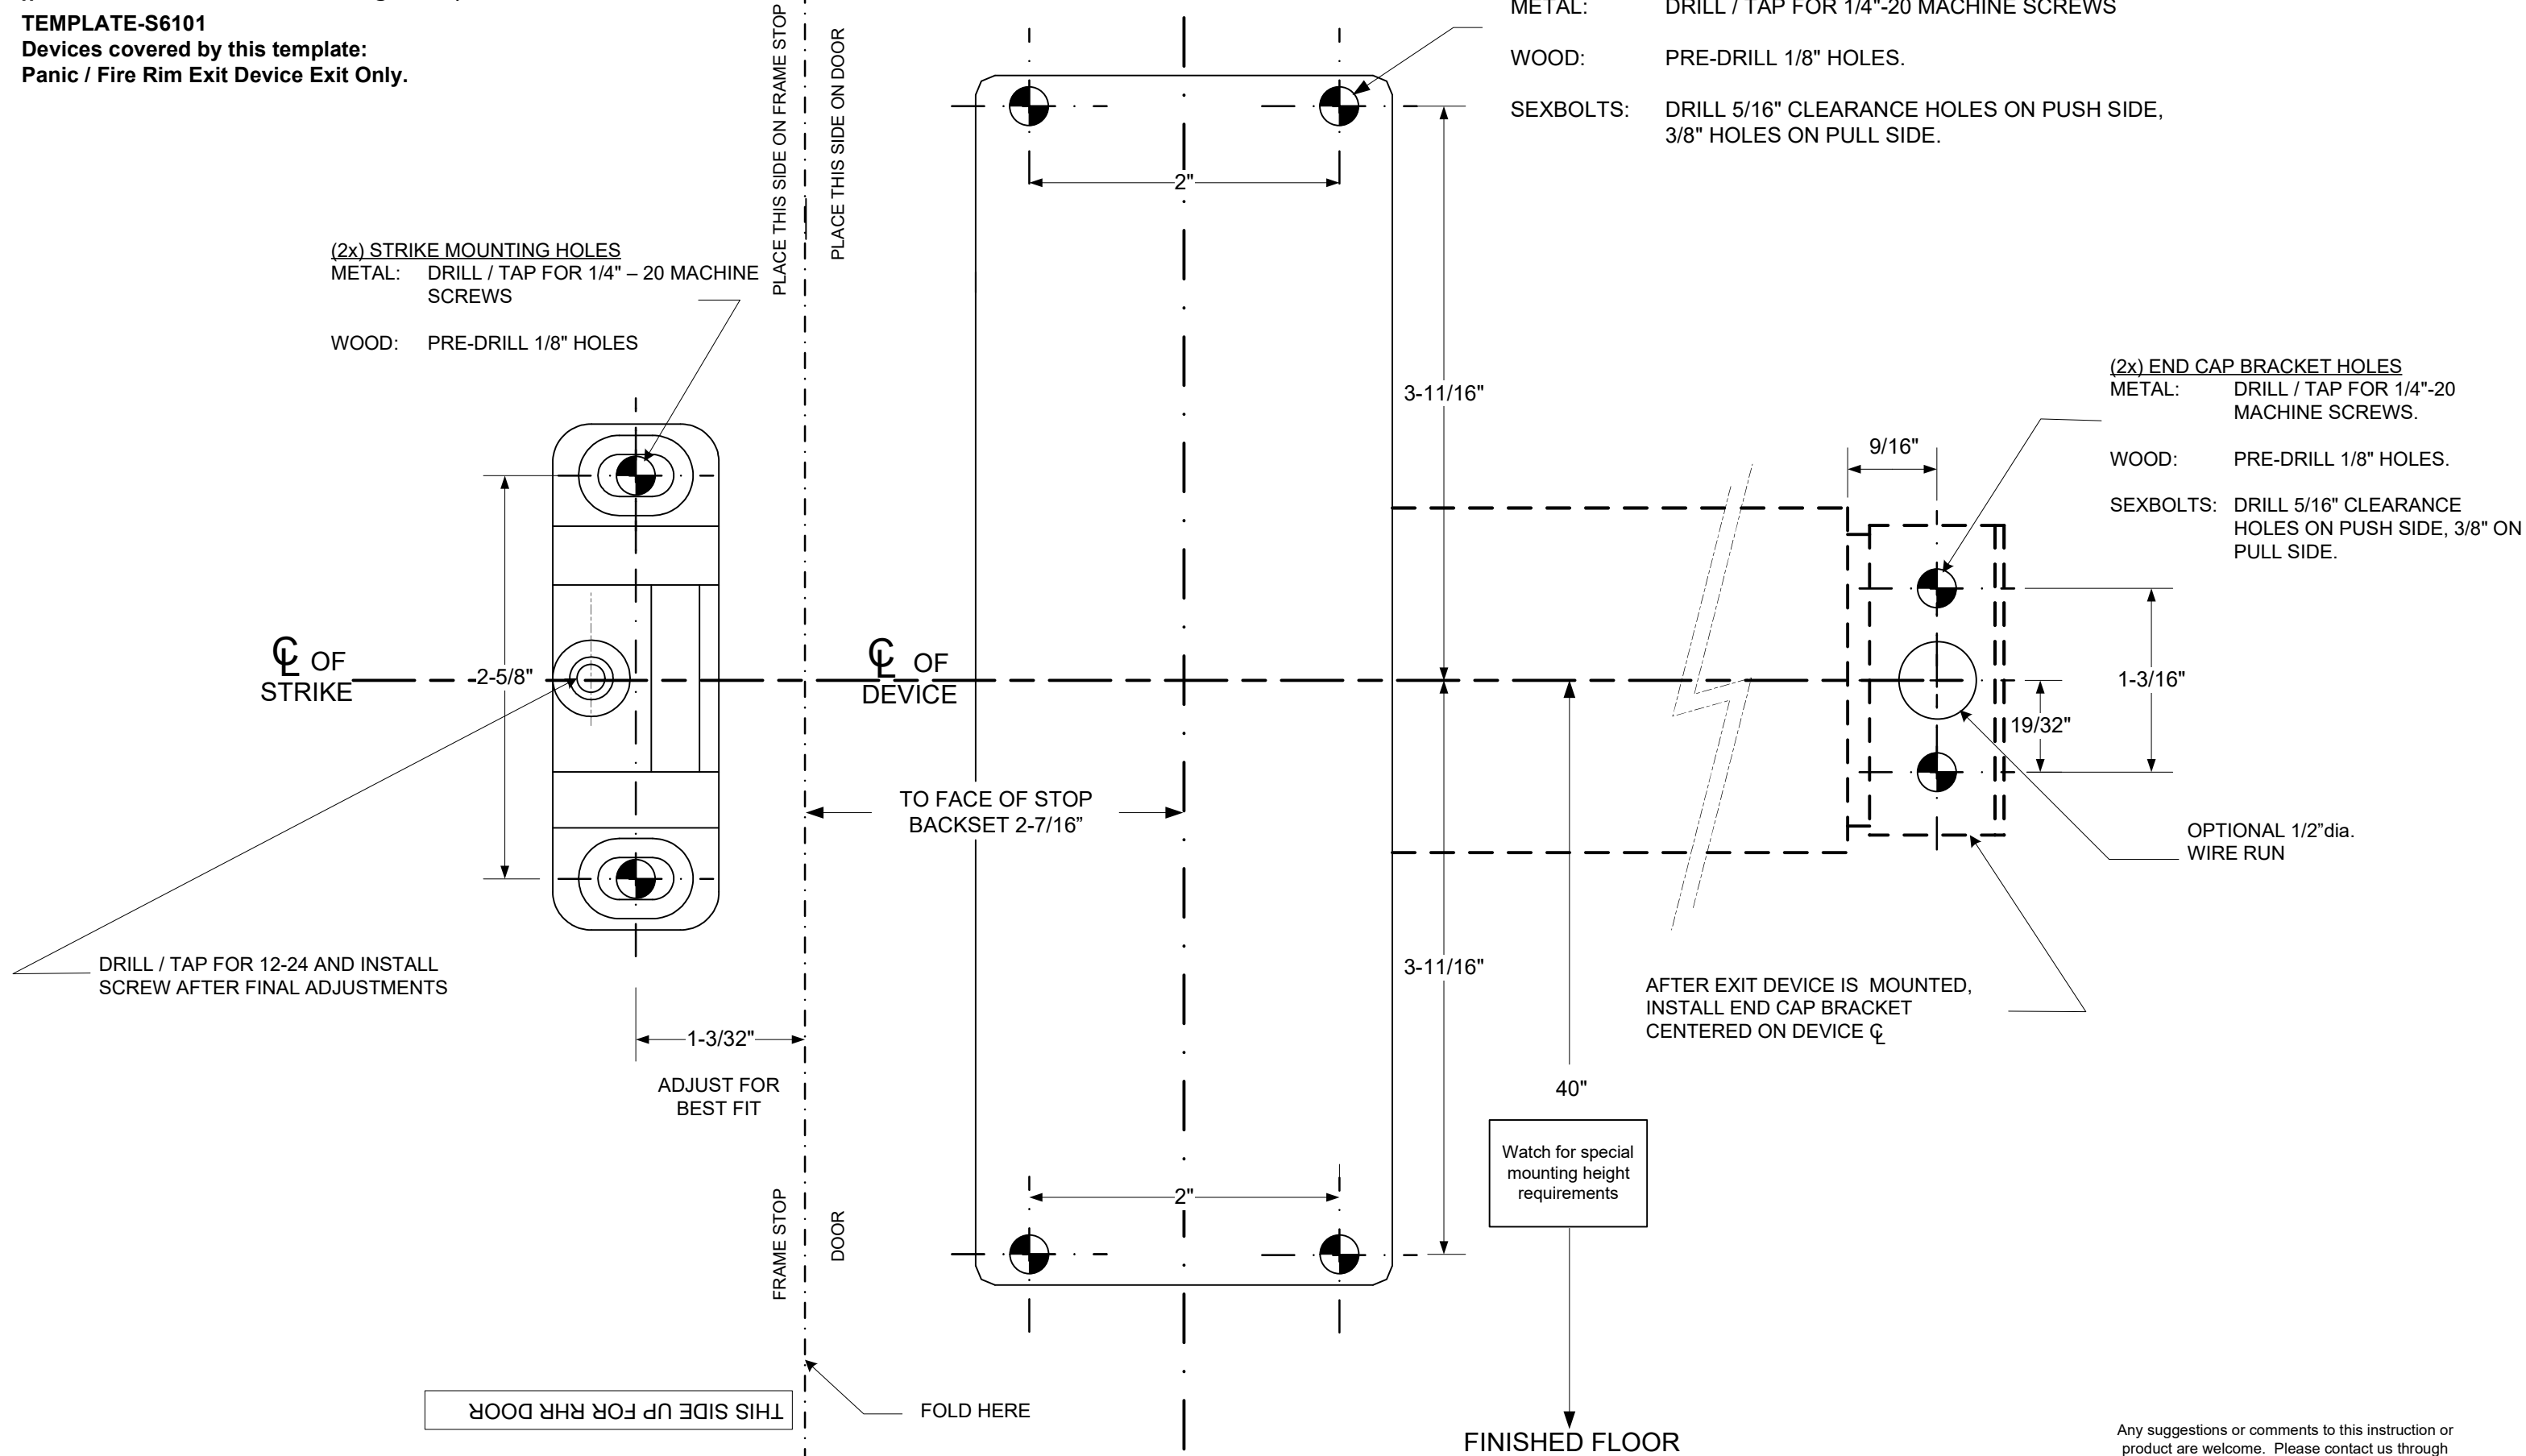

☉ OF STRIKE

☉ OF DEVICE

TO FACE OF STOP  
 BACKSET 2-7/16"

DRILL / TAP FOR 12-24 AND INSTALL  
 SCREW AFTER FINAL ADJUSTMENTS

1-3/32"  
 ADJUST FOR  
 BEST FIT

AFTER EXIT DEVICE IS MOUNTED,  
 INSTALL END CAP BRACKET  
 CENTERED ON DEVICE ☉

Watch for special  
 mounting height  
 requirements

OPTIONAL 1/2" dia.  
 WIRE RUN

THIS SIDE UP FOR RHR DOOR

FOLD HERE

FINISHED FLOOR