




Z7800 PRO SERIES
METAL DOOR, LOCK & TRIM PREP.
 FLAT OR BEVELED, HOLLOW METAL DOORS
 Rose Trim Models: E, G, N & 07

DIMENSIONAL REFERENCE ONLY

CHART FOR DRILLING TRIM HOLES						
OUTSIDE			INSIDE			
FUNCTION	LEVER HOLE	CYLINDER HOLE	THUMBTURN	LEVER	CYLINDER HOLE	THUMBTURN HOLE
** Z7830	●	●		●	●	
** Z7832	●	●		●	●	
** Z7835	●	●		●	●	
Z7850	●	●		●		
Z7852	●	●		●		


LOCK DETAIL

COMMON CENTER LINE
 LOCK, STRIKE, DOOR

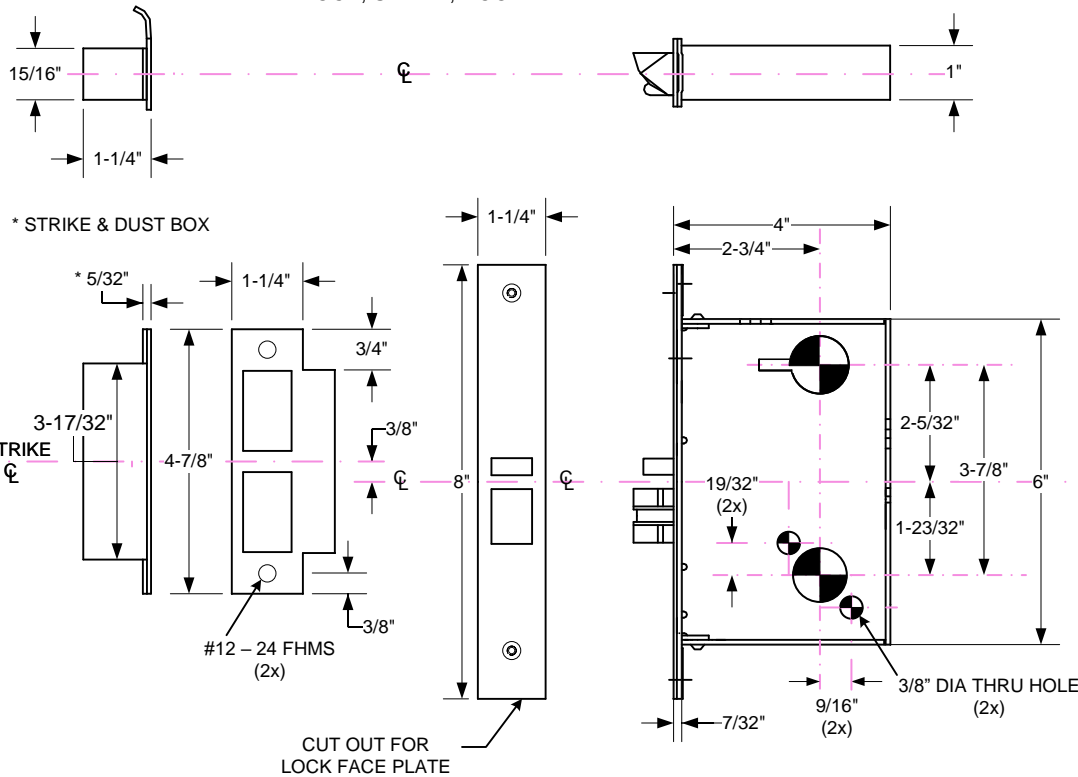

DOOR DETAIL

MEASURE BACKSET
 FROM \varnothing DOOR EDGE

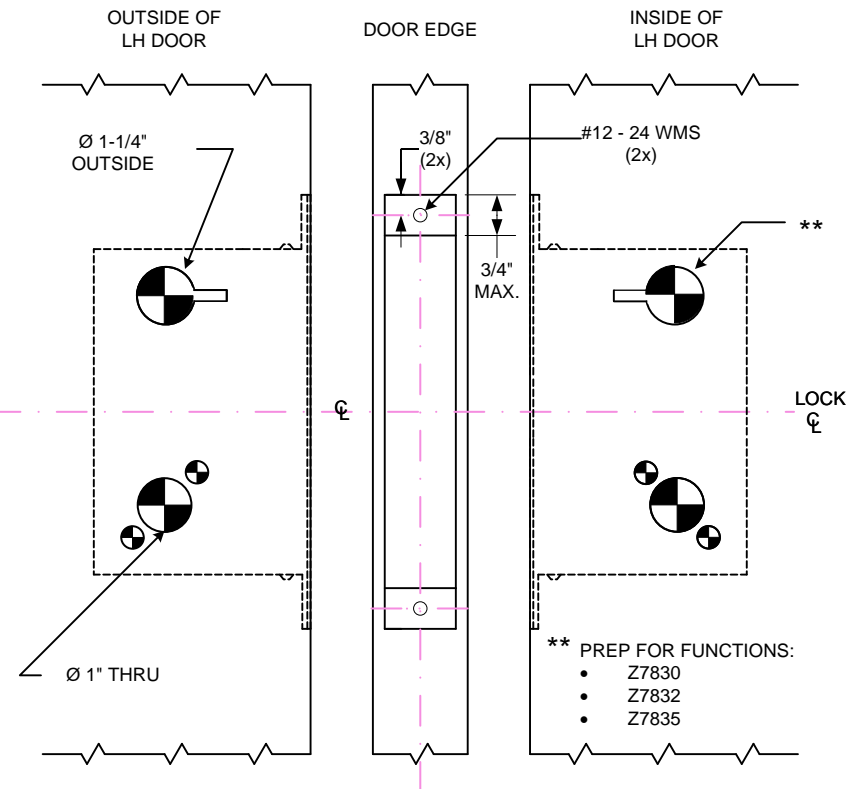




Z7800 PRO SERIES
WOOD DOOR, LOCK & TRIM PREP.
 FLAT OR BEVELED, WOOD DOORS
 Rose Trim Models: E, G, N & 07

DIMENSIONAL REFERENCE ONLY

CHART FOR DRILLING TRIM HOLES						
OUTSIDE				INSIDE		
FUNCTION	LEVER HOLE	CYLINDER HOLE	THUMBTURN	LEVER	CYLINDER HOLE	THUMBTURN HOLE
** Z7830	●	●		●	●	
** Z7832	●	●		●	●	
** Z7835	●	●		●	●	
Z7850	●	●		●		
Z7852	●	●		●		

LOCK DETAIL

COMMON CENTER LINE
 LOCK, STRIKE, DOOR

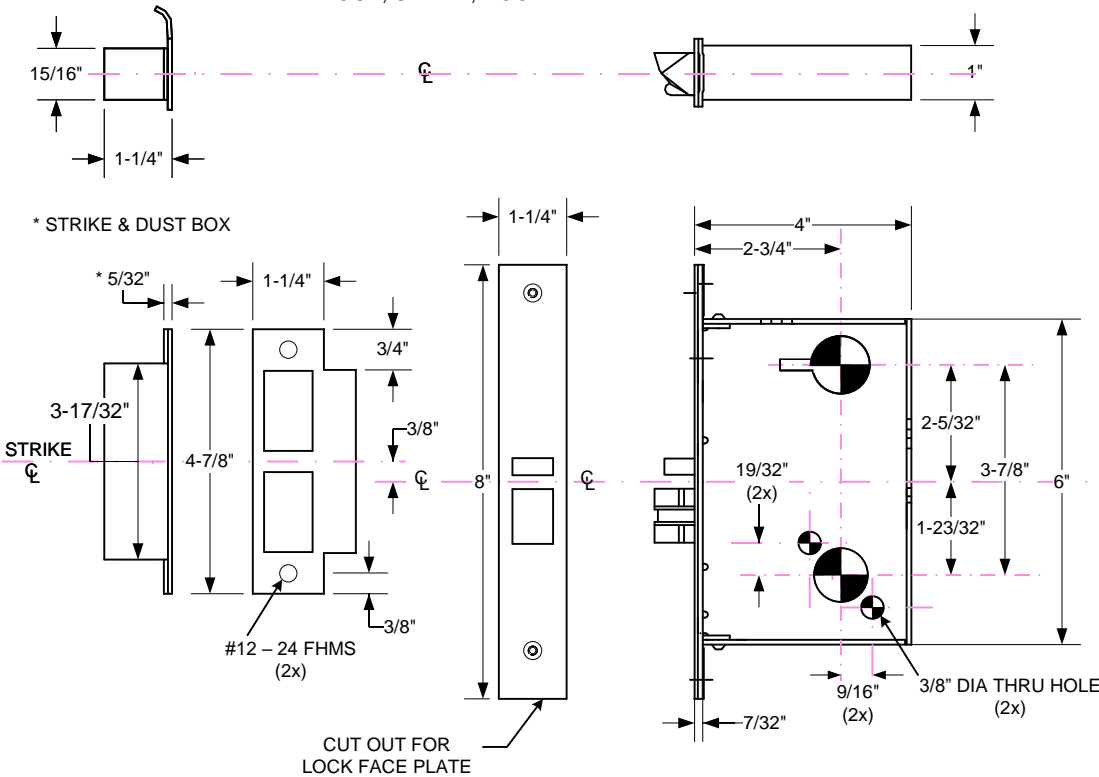

DOOR DETAIL

MEASURE BACKSET
 FROM \varnothing DOOR EDGE

